

Flamcomat MK-U G4 Remote


quickstart guide
kurzanleitung
snelstartgids
guide de rapide



that's excellence.


1

ENG - Unpack and loosen the vessel from the pallet.
DEU - Behälter auspacken und von der Palette.
NLD - Pak het vat uit en maak het los van de pallet.
FRA - Déballez et détachez le récipient de la palette.

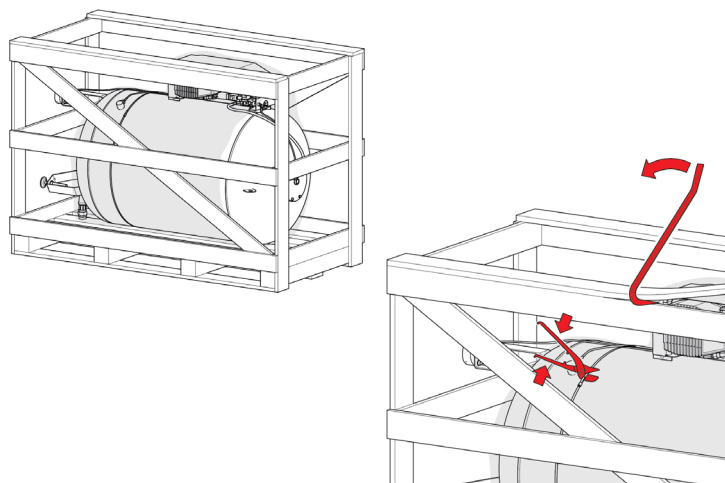


2

ENG - Gently stand the vessel upright using the hoist points.
DEU - Stellen Sie das behälter mithilfe von Hebepunkten aufrecht.
NLD - Zet het vat rechtop met behulp van de hijspunten.
FRA - Tenez la navire à la verticale à l'aide des points de levage.

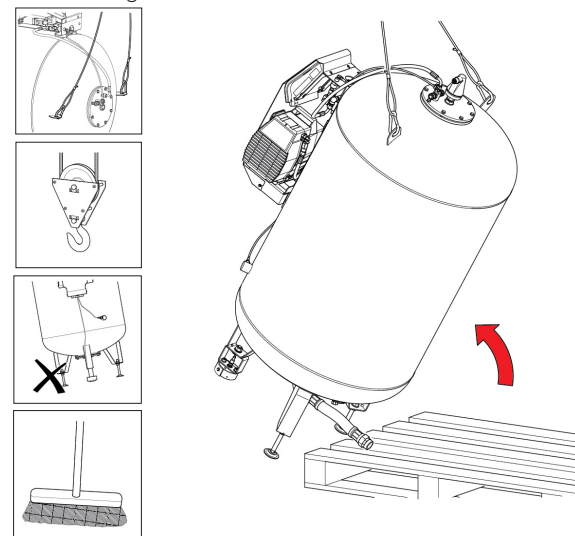


3

ENG - Lift the vessel with the jacking screw, remove the transport protection.
DEU - Drehen Sie den Bolzen, bis Platz zum Entfernen des Transportschutzes ist.
NLD - Draai de bout totdat er ruimte is om de transportbeveiliging te verwijderen.
FRA - Tournez le boulon jusqu'à ce qu'il y ait de la place pour retirer la protection de transport.

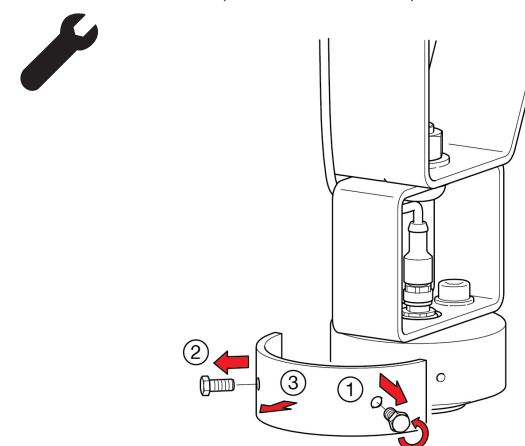


4

ENG - Check whether the sensor is flat, level and firmly seated on the ground.
DEU - Prüfen Sie, ob der Sensor flach, eben und fest auf dem Boden.
NLD - Controleer of de sensor vlak, waterpas en stevig op de grond.
FRA - Vérifiez si le capteur est plat, de niveau et fermement en place sur le sol.

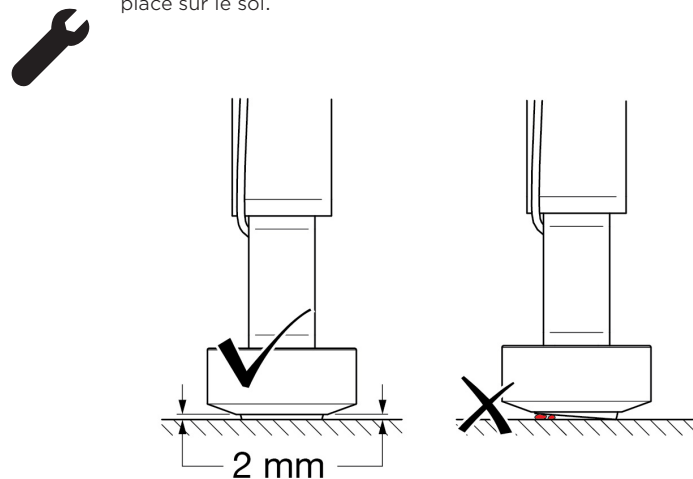


5

ENG - Straighten the vessel
DEU - Das Gefäß nivellieren
NLD - Stel het vat waterpas
FRA - Nivelier le vases

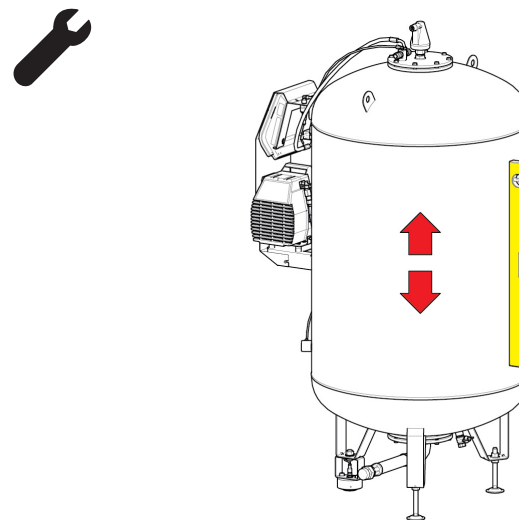


6

ENG - Connect the vessel to the system.
DEU - Verbinden mit dem System.
NLD - Sluit het aan op het systeem.
FRA - Connectez au système.

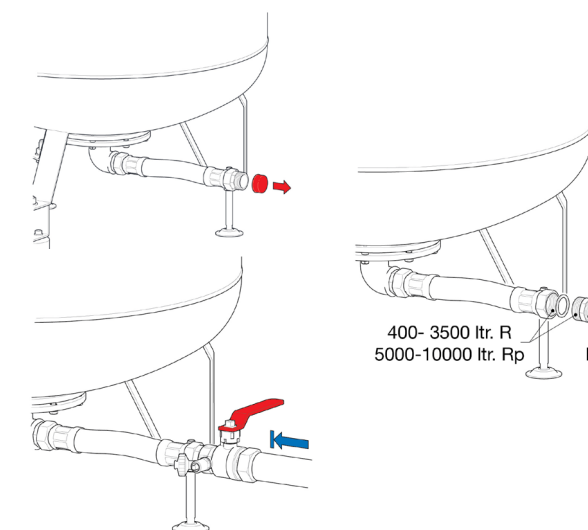


7

ENG - Remove Cover
DEU - Abdeckung en
NLD - Verwijder afde
FRA - Retirer le cour

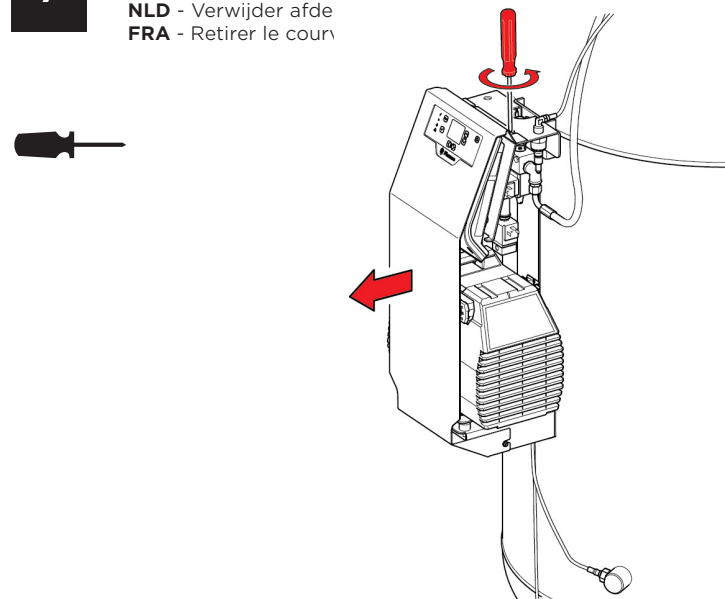


8

ENG - Connect power cable (100-240 VAC -1N PE, 50/60 Hz)
DEU - Schließen Sie das Netzkabel an (100-240 VAC -1N PE, 50/60 Hz)
NLD - Sluit de stroomkabel aan (100-240 VAC -1N PE, 50/60 Hz)
FRA - Connecter le câble d'alimentation (100-240 VAC -1N PE, 50/60 Hz)

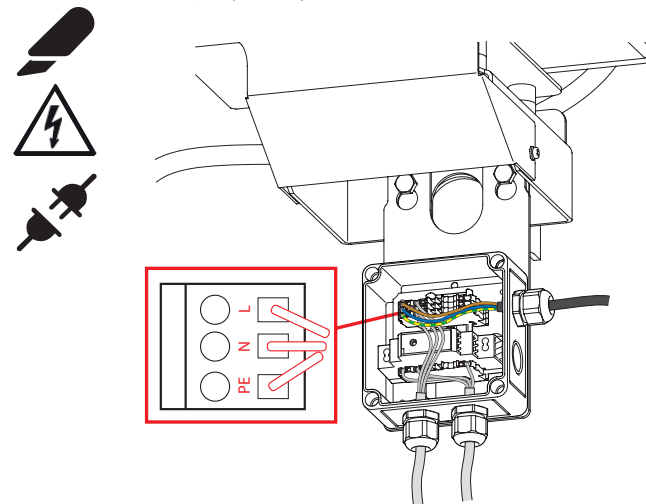

9

ENG - Add accessories (See accessory manual for installation)
DEU - Zubehör hinzufügen (Siehe Zubehörhandbuch)
NLD - Accessoires toevoegen (Zie accessoirehandleiding)
FRA - Ajouter des accessoires (Voir le manuel des accessoires)

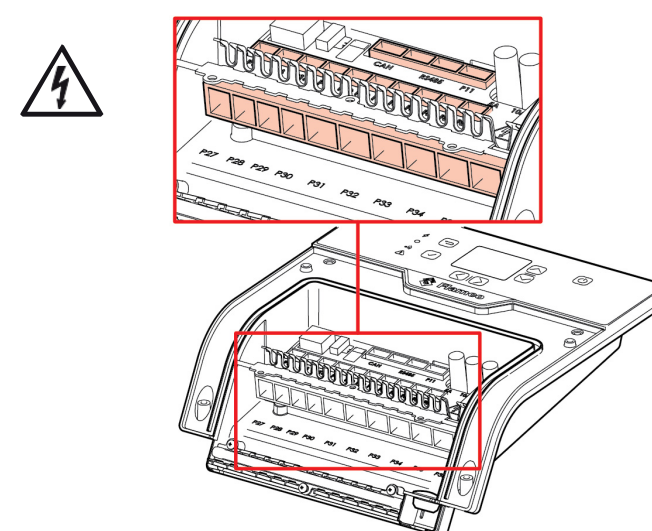

ENG Quickstart guide

Maintenance and service
Depressurise the installation and disconnect it from the power supply.
Safety requirements
The product must be earthed at all times. Installation and maintenance must be carried out by qualified personnel.
Removal
There is danger of scalding! Hot water can flow out of the system. Remove the product

DEU Kurzanleitung

Wartung und Service
Machen Sie die Anlage drucklos und unterbrechen Sie die Stromversorgung.
Sicherheitshinweise
Das Produkt muss jederzeit geerdet sein. Montage- und Wartungsarbeiten dürfen nur durch Fachpersonal ausgeführt werden.
Demontage
Vorsicht, Verbrennungsgefahr! Aus der Anlage kann heißes Wasser austreten. Entfernen Sie das Produkt.

NLD Snelstartgids

 







Onderhoud en service
Maak de installatie drukloos en spanningsloos.
Veiligheidsvoorschriften
Het product dient te allen tijde geaard te zijn. Laat installatie en onderhoud uitsluitend door gekwalificeerd personeel uitvoeren.
Demonteren
Er is gevaar van verbranding! Er kan heet water uit het systeem stromen. Verwijder het product.

FRA Guide de rapide











Entretien et maintenance
Dépressurisez l'installation et débranchez-la du courant.
Prescriptions de sécurité
Le produit doit être mis à la terre en tout temps. Le montage et la maintenance doivent être effectués par du personnel qualifié.
Démontage
Attention au danger de brûlure ! De l'eau chaude peut s'écouler du système. Retirez le produit.



flamco..aalberts-hfc.com

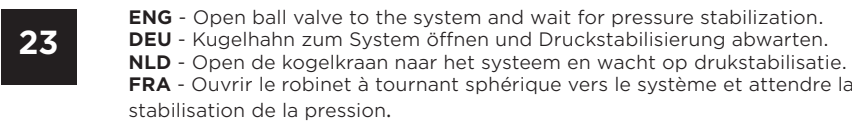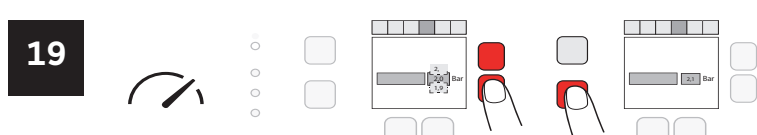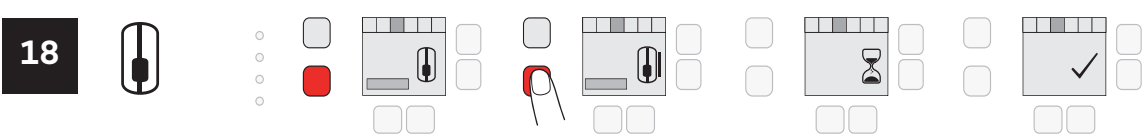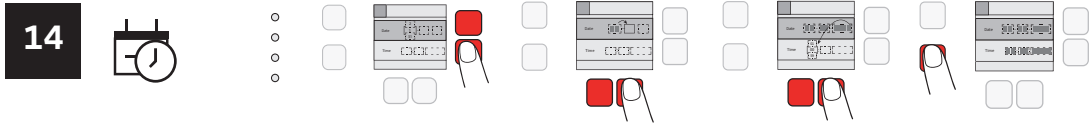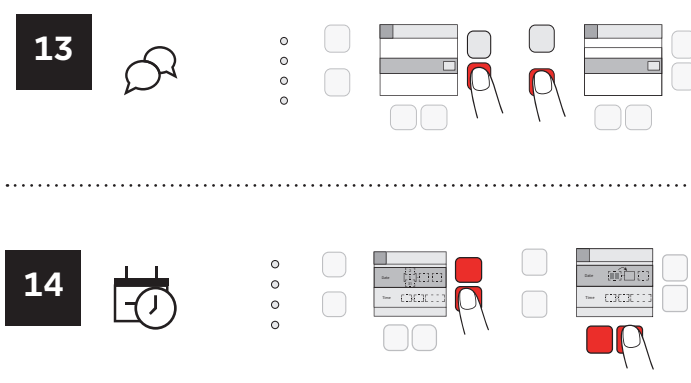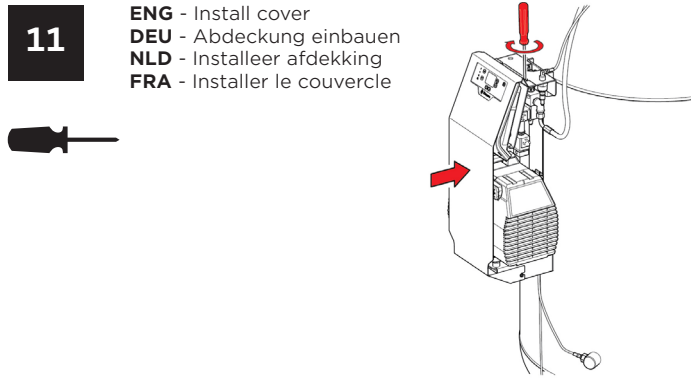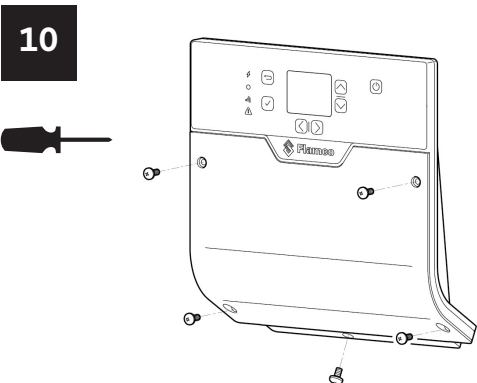

Register via:
<https://flamco.aalberts-hfc.com//registration-remote>
or scan:

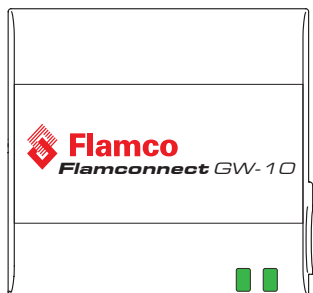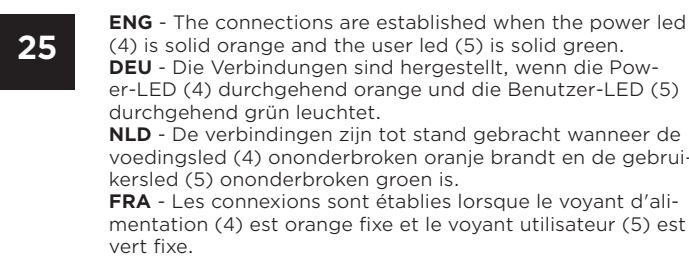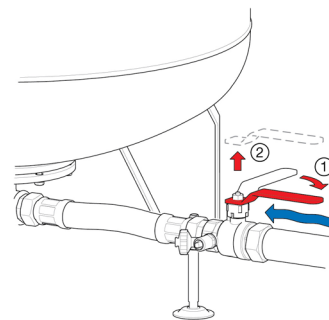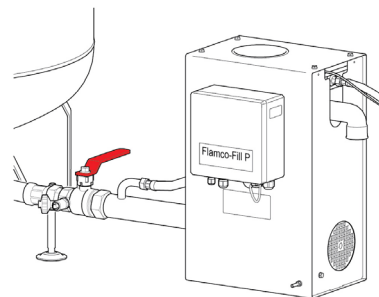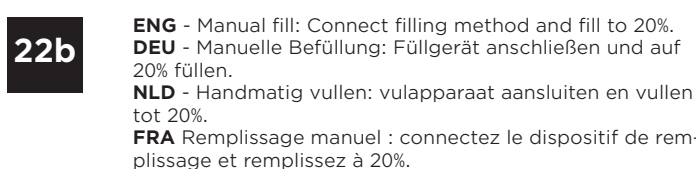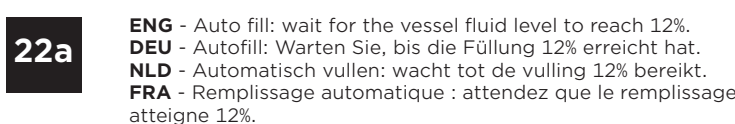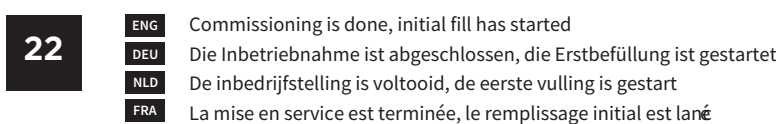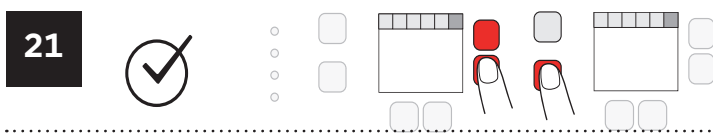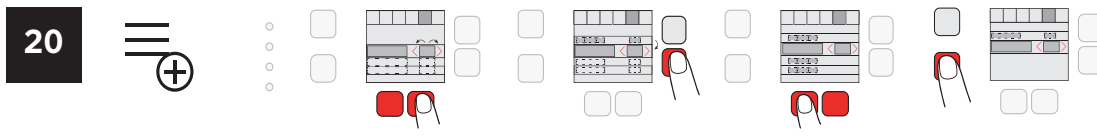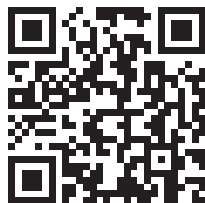

Power Led (5)	
Off	The gateway is not powered
Red	The gateway is powered but there is no SIM installed, no antenna mounted or no cellular network signal
Orange	The gateway is powered, SIM is installed, antenna is mounted and has cellular network signal

User Led (4)	
Off	Startup script not started yet
Red (solid)	Startup script is running
Red (blinking)	The gateway is up and running, there is no internet connection
Amber (blinking)	The gateway is up and running, but no connection with Flamconnect Portal and no serial data from device
Amber (solid)	The gateway is up and running, serial data from device is received but there is no connection with Flamconnect portal
Green (blinking)	The gateway is up and running and connected with Flamconnect but there is no serial data from the device
Green (solid)	The gateway functions as supposed and is connected with the device and the Flamconnect portal
All colours (blinking)	Identification mode has been enabled from the Flamconnect Portal (duration: 30s)

